

CUMPAN

Cockpit Assistant

HONDA CRF450RX Model year 2022

Installation suggestion from BEROTEC



Customer example - No guarantee for functionality

HONDA CRF450RX


Position display

Mounted on the handlebar with optional display holder



Connection of the RPM signal ("SENS" setting: UNI - "COUNT" setting: 18)

The corresponding connector is located on the left side of the engine, inside the vehicle frame. Here the speed signal is tapped at the white-yellow cable with the branch connector.

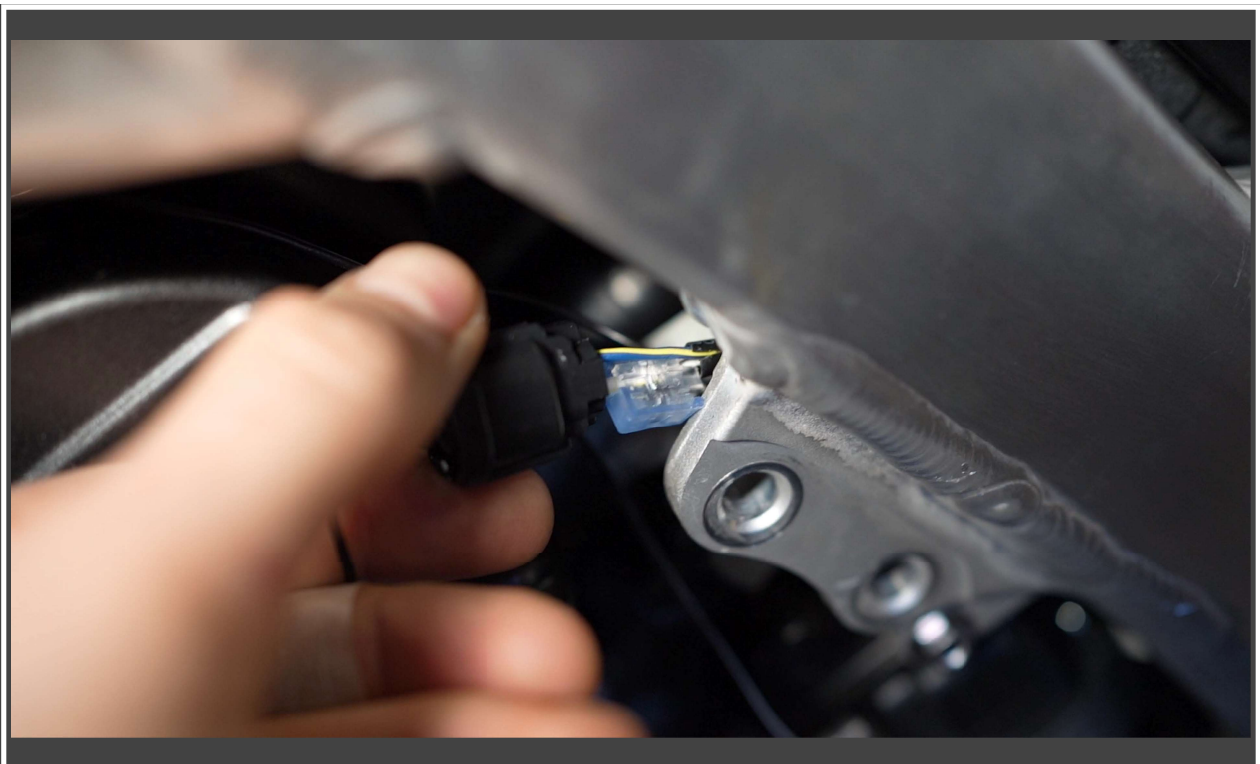

HONDA CRF450RX

Position engine temperature sensor (M10x1,25)

The temperature sensor replaces a blind plug on the underside of the motor.



Power connection

Power connection at the plug behind the lamp mask. On the 4-pin plug is selected black and red cable. black=ground connection and red=12V

