

CUMPAN

Cockpit Assistant

**KTM RC8
Model year 2010**

Installation suggestion from TW



Customer example - No guarantee for functionality

Position display

Tip for the bracket: I simply took a strip of sheet metal, bent it at a 90 degree angle and screwed it to the side of one of the speedometer brackets. I mounted the Cumpan there with the supplied adhesive pad and additional cable ties. So far I have had no problems with this attachment.




Connection of the RPM signal ("SENS" setting: BIKE)

This plug is located in a different place than on the Superduke. Here it is located on the left between the tank and frame. On the RC8, the wires from the plug must be swapped so that the correct cable is tapped.




Position gear signal plug

On the left side of the frame, above the pinion.

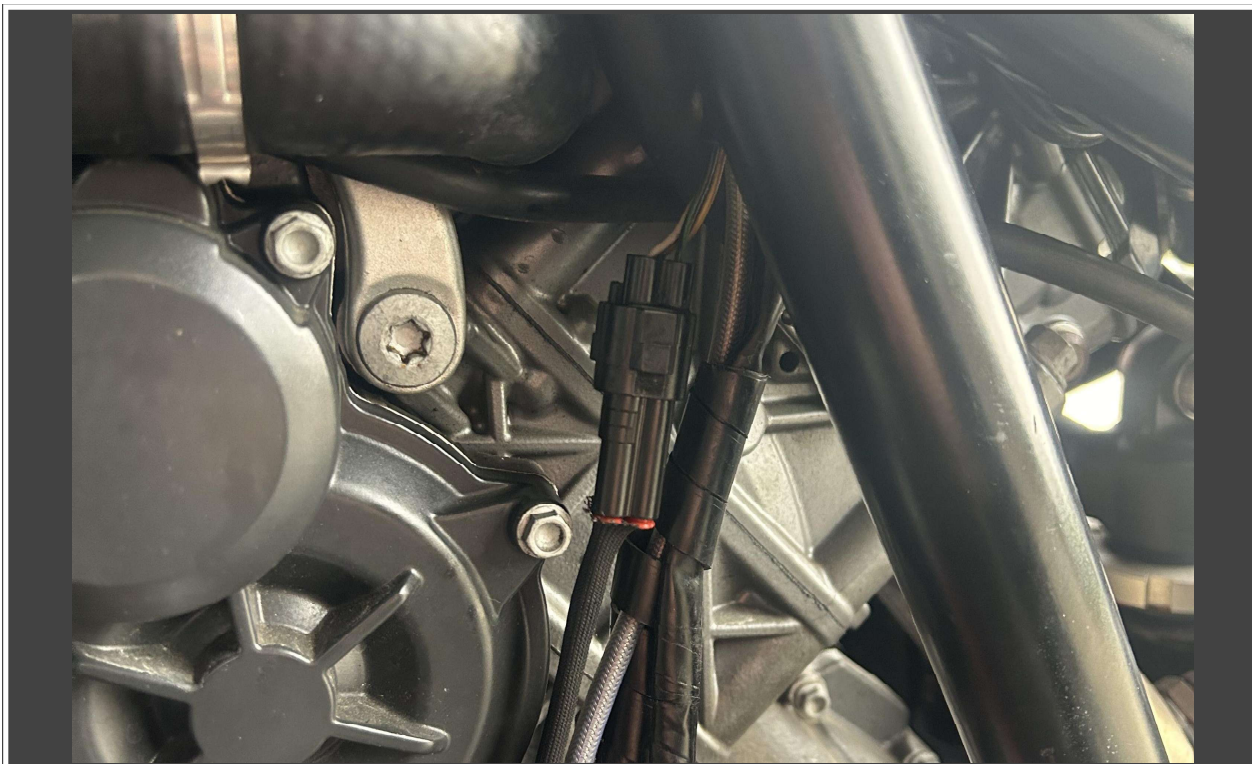


Position gear sensor

Left side of the motor, below the pinion.

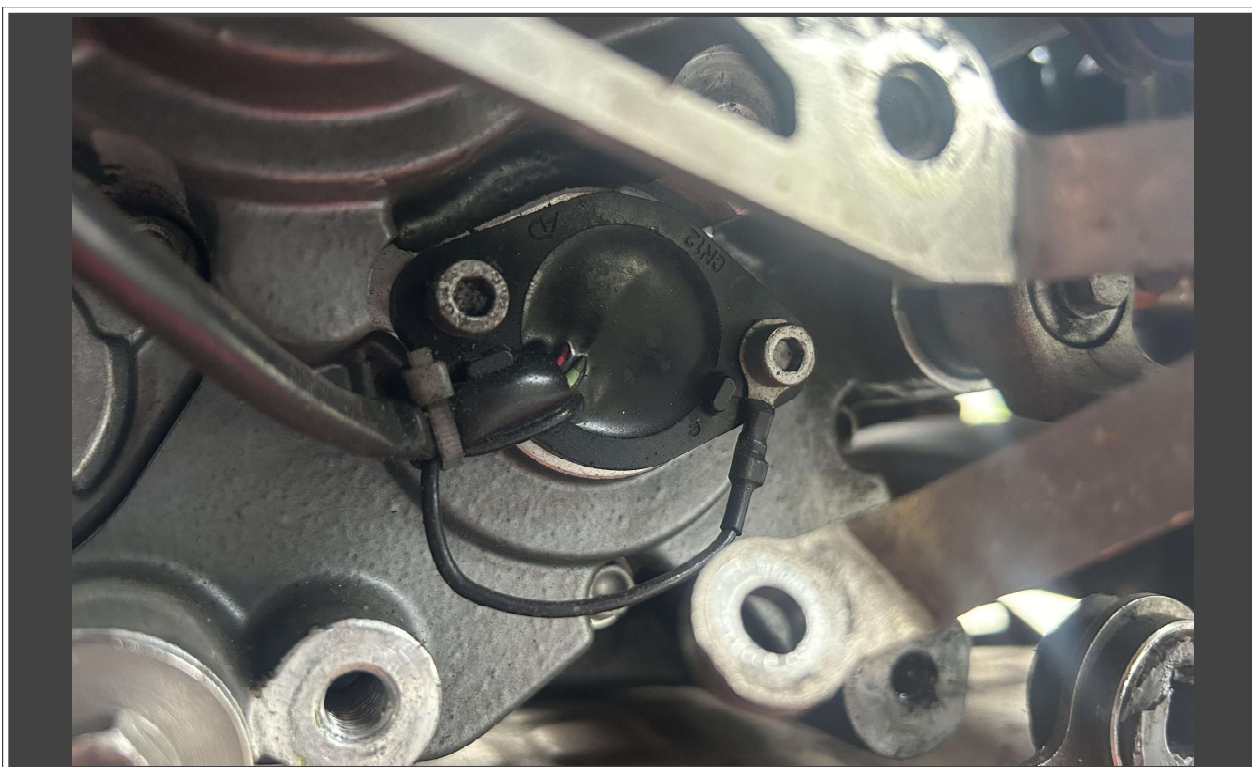

Position engine temperature sensor (M10x1)

Left side of the motor, above the pinion.

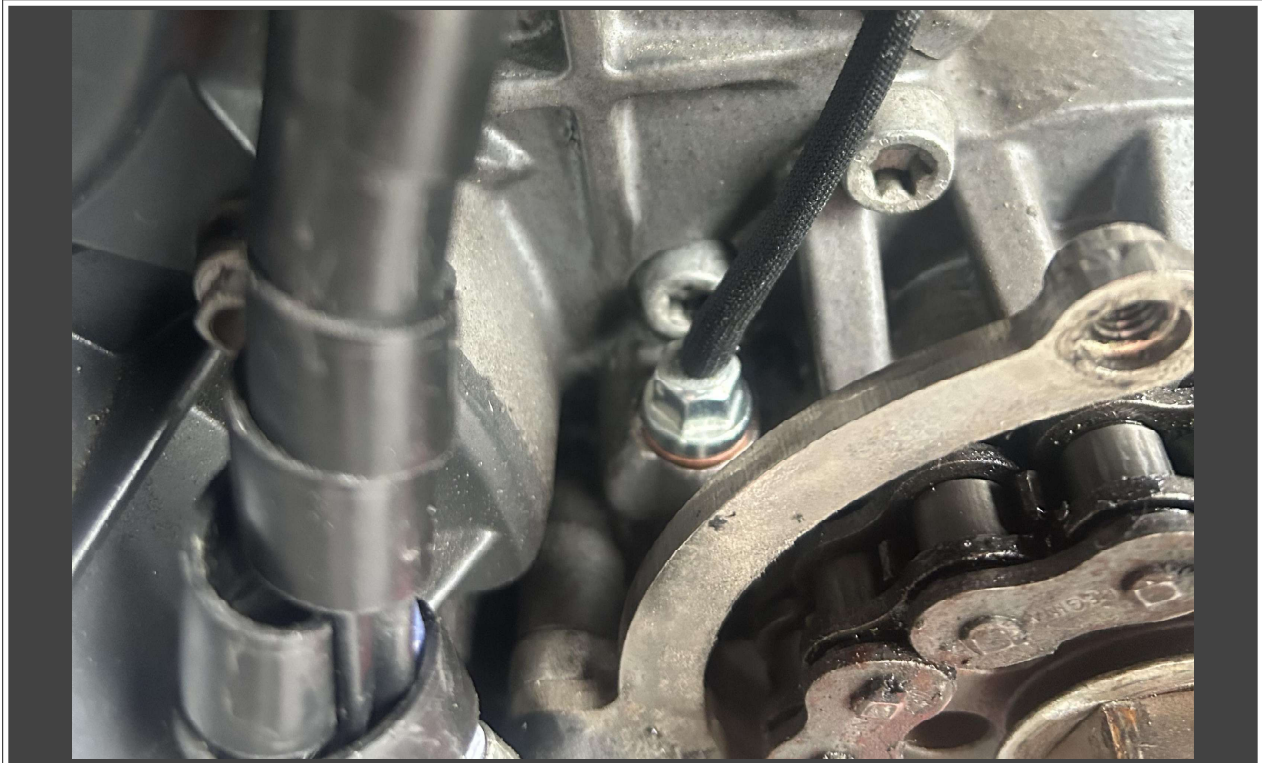

Power connection 12v

Power connection for the CUMPAN. This can be found under the speedometer. To do this, simply lift the speedometer carefully at the lower end. The speedometer is only plugged onto the rubber of the ignition lock. You should find the ACC2 connections above the ignition lock. Then carefully push them down and connect the CUMPAN.

