

Benutzerhandbuch

User Guide

Manuel d'utilisation

Manuale d'uso

Manual del usuario

BEROTEC

FANTIC Caballero | Kennzeichenhalter



SAFETY INSTRUCTIONS

Basic safety instructions

Congratulations on the purchase of a product from BEROTEC. If you have any criticism, tips, suggestions for improvement or a special request, please do not hesitate to contact us. This document serves as a basis for the safe use and operation of the product. In particular, the safety instructions must be observed by all users.

Intended use

The license plate holder is intended for use on the specified two-wheelers. Correct function cannot be guaranteed for other applications, operation is at the user's own risk and to the exclusion of any warranty. Installation and operation must be carried out in accordance with these instructions and the intended use. In case of improper use or non-observance of these instructions, no liability will be accepted for any damage that may occur. The installation of this product requires basic technical knowledge. Please observe all instructions in this manual and in the vehicle manual.

Observe all instructions in these instructions and in the vehicle manual. Compatibility with other accessories is not guaranteed.

Mounting is intended for vehicles in factory condition. Mounted accessories can change the driving characteristics and stability of the vehicle.

Status operating instructions: 07/2023

Contact for queries: info@berotec.de

Scope of delivery

- » License plate holder for FANTIC Caballero from 2018 (not compatible with the Flat Track models)
- » Screws M8 * 35 (2 pieces)



Scope of delivery



Mounting

Mounting

Make sure that all parts listed in the parts list are present. If necessary, have a second person help you. All parts and connections loosened for assembly must be reassembled according to the vehicle manufacturer's specifications or replaced with the parts supplied. All screw connections must be tightened to the tightening torques specified by the vehicle manufacturer. Finally, check whether all parts and connections have been properly mounted. After the first 50 km, check the entire assembly and the correct tightening torques of all screw connections. Carry out visual inspections at regular intervals.

Observe the maximum permissible speed of 130 km/h.

The aluminum support purchased here is installed in exchange for the original steel support. The supplied screws must be used. The Kuststoff license plate holder with license plate light is taken over from the original rear part.

BEROTEC GmbH

Gewerbestr. 13
75057 Kürnbach
Deutschland

 +49 7258-2009090
 info@berotec.de
 www.berotec.de



f



You
Tube