

Benutzerhandbuch

User Guide

Manuel d'utilisation

Manuale d'uso

Manual del usuario

BEROTEC

CUMPAN

YAMAHA Ténéré 700

MT07 | R7 | Tracer 7 | XSR700



Installation YAMAHA MT-07 | R7 | T7 | Tracer 7 | XSR700

1. Display placement



» Check that the cables between the display and the sensors are long enough


2. Connect the RPM signal



» Left-hand engine side, behind the rectifier


» Connect the black CUMPAN cable (1) with the Presslok™ connector (2) to the gray cable of the two-pole plug (3)

3. Install the BOSCH combination sensor on the right-hand side of the engine.

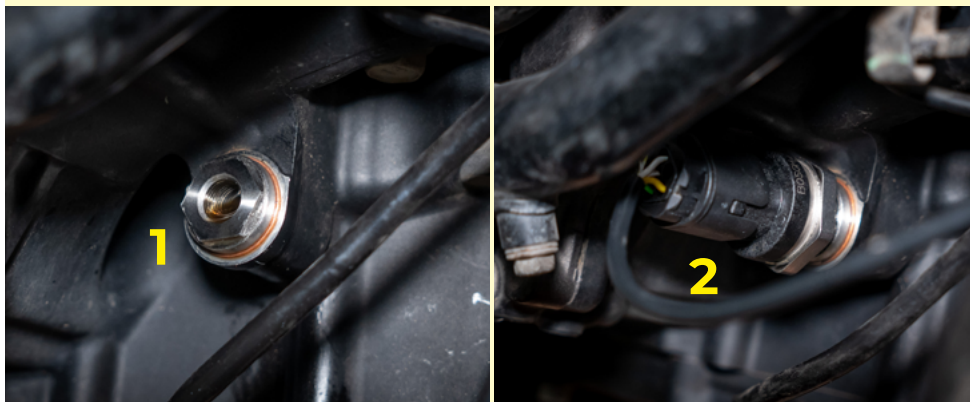

- » Replace the sealing plug on the engine housing – collect any oil that comes out
- » Screw on the reduction from M16 to M10x1, including the sealing ring (1)
- » Screw in the BOSCH combination sensor incl. seal and connect the plug (2)

4. Connect 12V

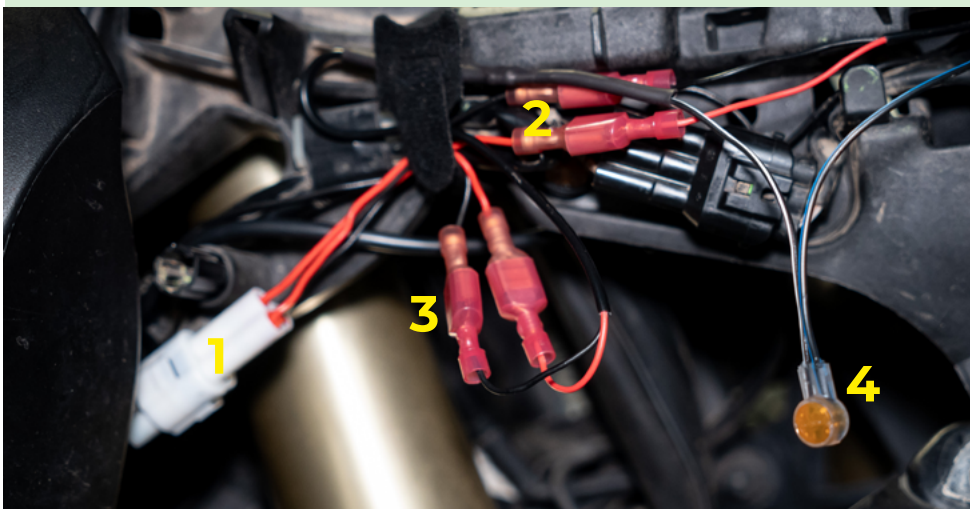

- » Connect the 12V adapter to the accessory plug at the level of the right turn signal (1)
- » Connect CUMSPAN to 12V adapter – red to red, black to black (2)
- » Optional: Connect additional modules to 12V adapter (3) and signal line (4)
- » Function description and further settings in the [operating instructions](#)

BEROTEC GmbH

Gewerbestr. 13
75057 Kürnbach
Deutschland

 +49 7258-2009090
 info@berotec.de
 www.berotec.de

