

BEROTEC

Benutzerhandbuch

User Guide

Manuel d'utilisation

Manuale d'uso

Manual del usuario

High Fender + Gabelprotectoren

High Fender + Fork Protectors | Garde-boue haut
+ Protecteurs de fourche | Parafango alto + Prote-
zioni forcella | Guardabarros alto + Protectores de
horquilla




High Fender + Fork Protectors

1. Dismantle original parts


2. Mount fender with 4 screws M6x25, 4 O-rings and 4 plastic spacers

- » Place O-rings on screws and fit from below (blue)
- » Run the brake line between the distances (red)
- » Short plastic distances (6mm) in the direction of travel (yellow) at the front

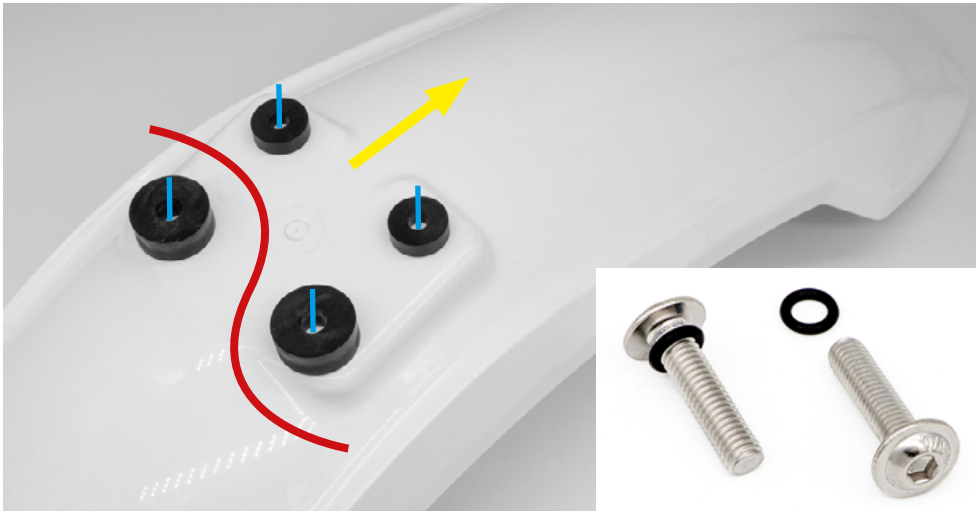

3. Fork protectors to be attached using the original M6 screws (blue)

- » Mount the washer between the fork leg and the fork protector (yellow) on the side screw.

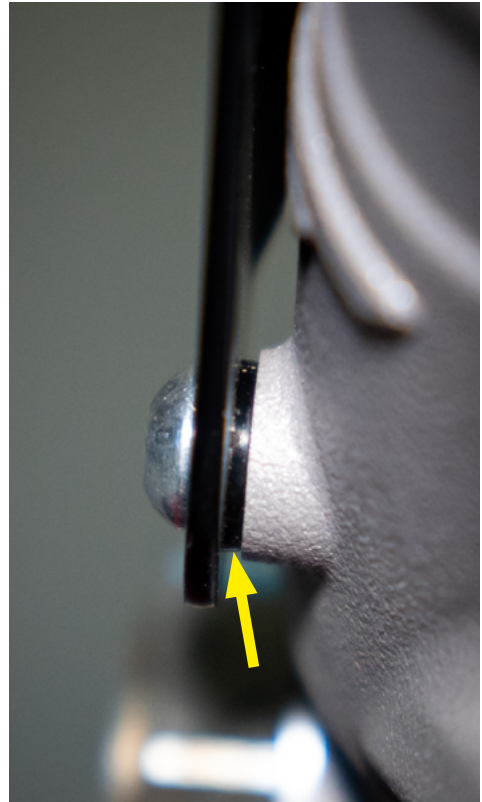

4. Tighten all screw connections and check again after the first 50 kilometers.

Scope of delivery:

- 1x fender
- 4x O-ring for screw centering
- 2x plastic spacers 6mm for mudguard
- 2x plastic spacers 10mm for mudguard
- 1x pair of fork protectors left/right
- 4x M6x25 screw
- 2x black washers

BEROTEC GmbH

Gewerbestr. 13
75057 Kürnbach
Deutschland

 +49 7258-2009090
 info@berotec.de
 www.berotec.de

