

# Benutzerhandbuch

User Guide

Manuel d'utilisation

Manuale d'uso

Manual del usuario

**BEROTEC**

**CUMPAN**

**Sportenduro Var. 2**

**KTM / HUSQVARNA / GasGas**

250 EXC TPI  
300 EXC TPI

TE 250i  
TE 300i  
TX 300i

EC 250  
EC 300  
EX 250  
EX 300




## Installation KTM / HUSQVARNA / GasGas

### 1. Install CUMPAN in the field of vision



- » Route the cable behind the lamp mask
- » Laying cables on the existing wiring harness

### 2. Connect RPM signal

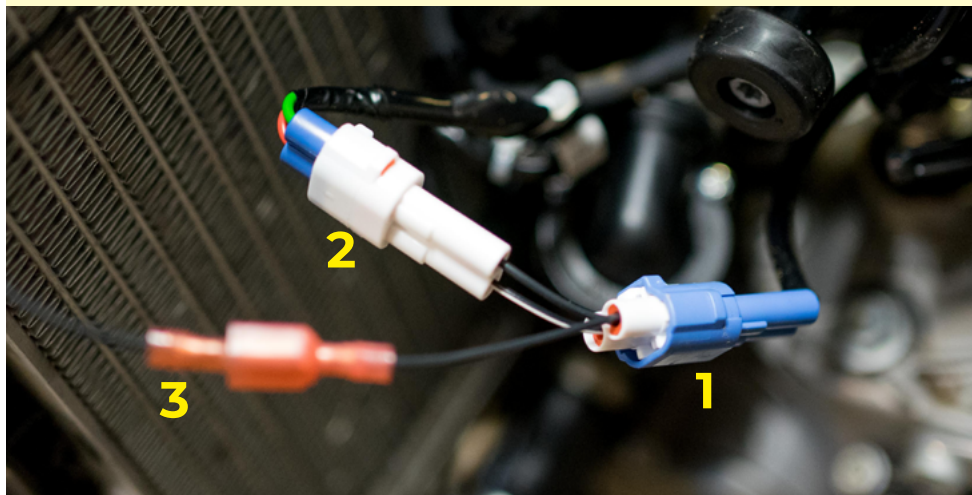

- » Look for blue connector (1) above the cylinder
- » Insert intermediate plug (2) and connect with CUMPAN (black cable) (3)


### 3. Engine temperature sensor (water temperature)

#### Video



- » Remove the cooling water hose, collect the cooling water
- » Install the water temperature adapter in the center of the cooling water hose
- » Screw in the 1/8" engine temperature sensor and reinstall the hose
- » Fill up with cooling water, check for leaks at operating temperature!

### 5. Connect power (behind the lamp mask)

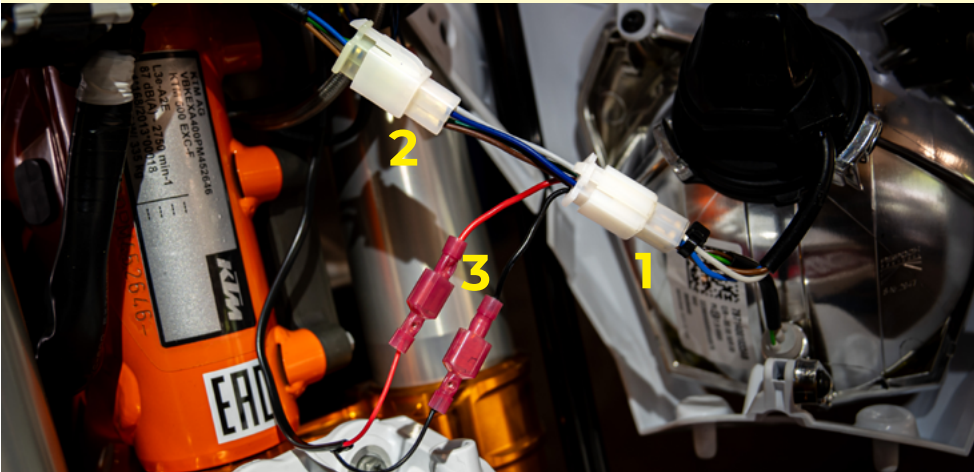

- » Locate and disconnect 4-pin connector on light (1)
- » Insert the adapter plug (2) and connect it to the power cable of the CUMPAN (3)
- red with red and black with black (ground)

### 6. Settings in the „SENS“ menu: » 2-stroke: SENSOR → „BIKE“ // DAMPING → 200

» 4-stroke: SENSOR → „UNI“ // COUNT → 18 // DAMPING → 200

### 7. [Calibrate gears \(video\)](#) → details in the [operation manual](#)

## **BEROTEC GmbH**

Gewerbestr. 13  
75057 Kürnbach  
Deutschland

 +49 7258-2009090  
 [info@berotec.de](mailto:info@berotec.de)  
 [www.berotec.de](http://www.berotec.de)

